




OMNI 20


What's in the box

Quick Start Guide


Guide de démarrage rapide

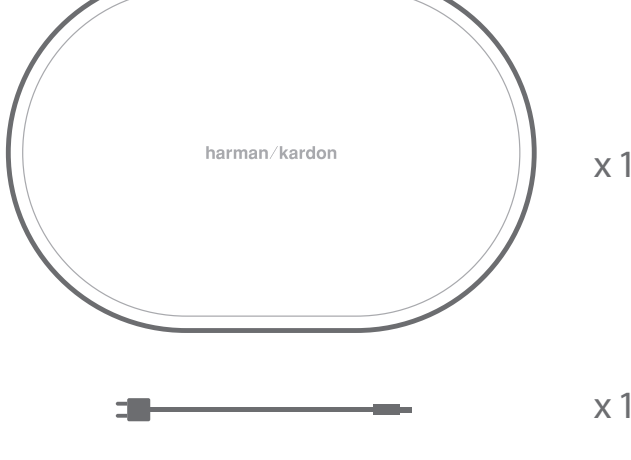

Buttons

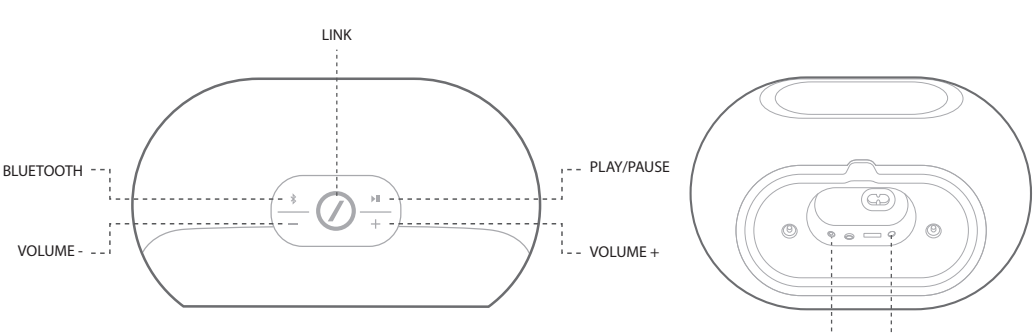


Connections

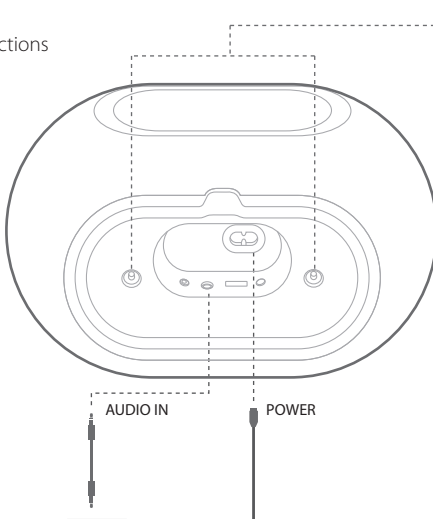



Stand mount screw holes
Trous de vis de montage du pied
Orificios para los tornillos del soporte de montaje
Buracos dos parafusos de montagem do suporte
Löcher für die Befestigungsschrauben
Fori per le viti di montaggio del supporto
Schroefgaten montagestand
Skruvhull for veggstativ
Telineen ruuvi kiinnityksen reiät
Отверстия для винтов для монтажа стойки
Skruehål för montering på stativ
Skruehuller til montering af holder
スタンド取り付け用ねじ穴
스탠드 장착 나사 구멍
坐地安裝螺絲孔
立式安裝螺孔
Lubang sekrup pemasangan berdiri

App

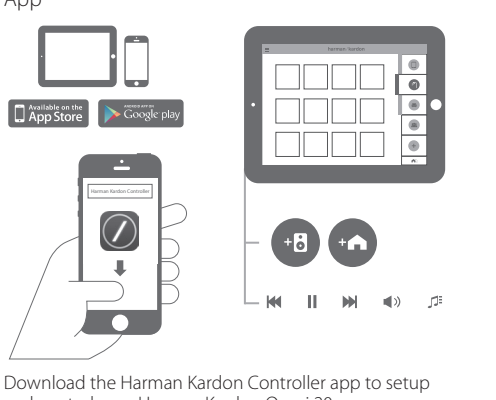



Laden Sie die Harman Kardon Controller-App herunter, um Ihren Harman Kardon Omni 20 konfigurieren und bedienen zu können. Scarica l'app Harman Kardon Controller per impostare e controllare il tuo Harman Kardon Omni 20. Download de Harman Kardon Controller app om uw Harman Kardon Omni 20 te installeren en te bedienen. Last ned Harman Kardon Kontroll-appen for å sette opp og kontrollere Harman Kardon Omni 20. Lataa Harman Kardon Controller-sovellus, jotta voit määrittää Harman Kardon Omni 20 -laitteen asetukset ja hallita sitä. Загрузите приложение Harman Kardon Controller, чтобы настроить свой продукт Harman Kardon Omni 20 и управлять им. Hämta appen Harman Kardon Controller för att ställa in och styra din Harman Kardon Omni 20. Hent applikationen Harman Kardon Controller, så du kan konfigurere og styre din Harman Kardon Omni 20. Harman Kardon Controller (ハーマンカードン・コントローラー)アプリをダウンロードしてセットアップし、お持ちの Harman Kardon Omni 20 (ハーマンカードン・オムニ20) をコントロールしてください。 Harman Kardon Controller 앱을 다운로드하여 Harman Kardon Omni 20을 설정하고 제어합니다. 下載 Harman Kardon Controller 應用以設置和控制您的 Harman Kardon Omni 20。 下載 Harman Kardon Controller 應用程式以設定並控制您的 Harman Kardon Omni 20。 Unduh aplikasi Harman Kardon Controller untuk persiapan dan mengontrol Harman Kardon Omni 20 Anda.

WPS (Wi-Fi Protected Setup)

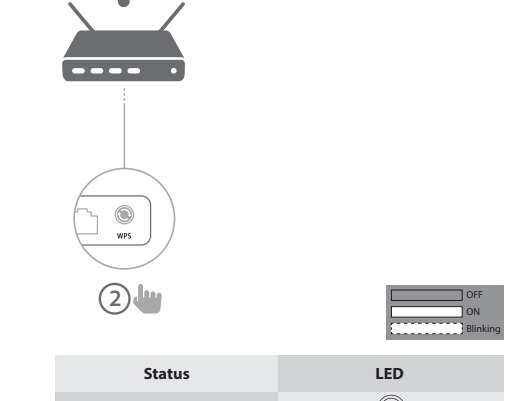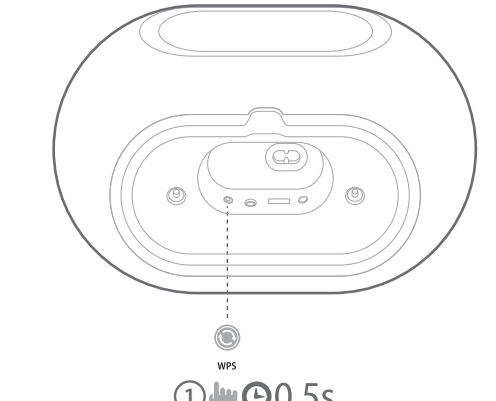




Status	LED
Connecting	
Connected	

Wi-Fi streaming via Harman Kardon Controller app

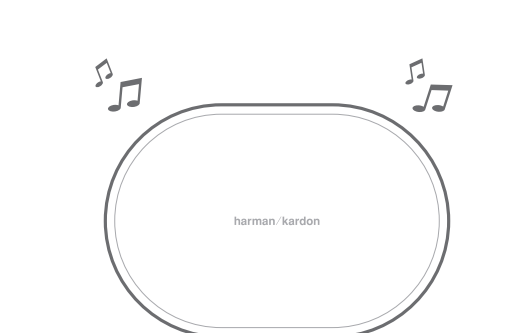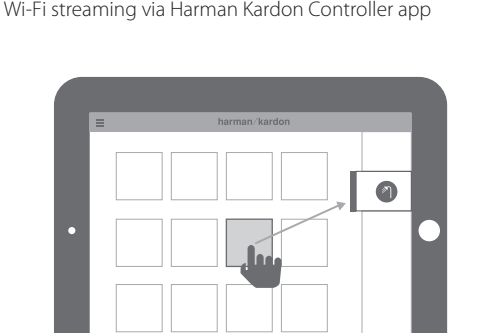



Status	LED
Wi-Fi connected	
Wi-Fi streaming	

Bluetooth®

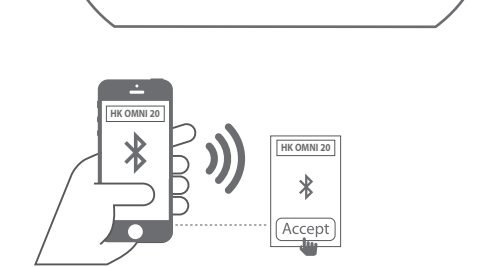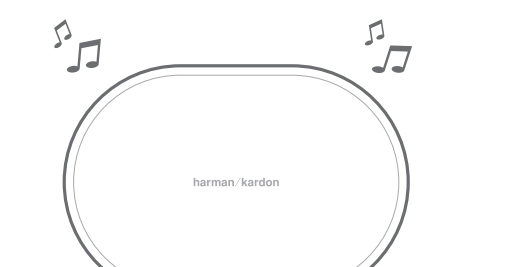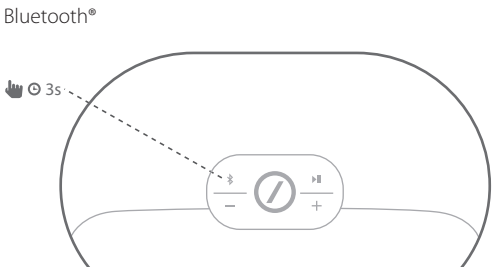



Status	LED
Pairing mode	
Connected	
Streaming	

AUX input source

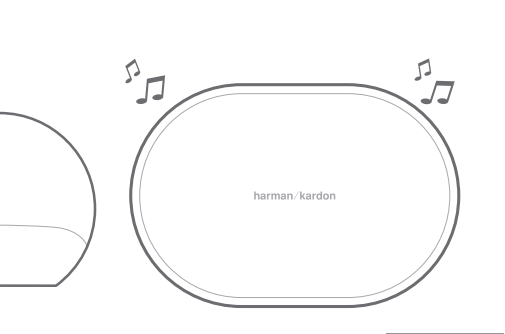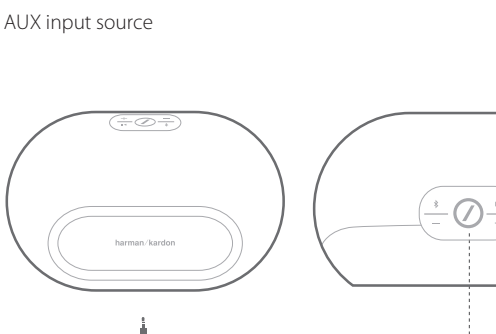




Status	LED
Aux active	
System idle	
Auto standby (15 minutes)	

Multi-room music streaming

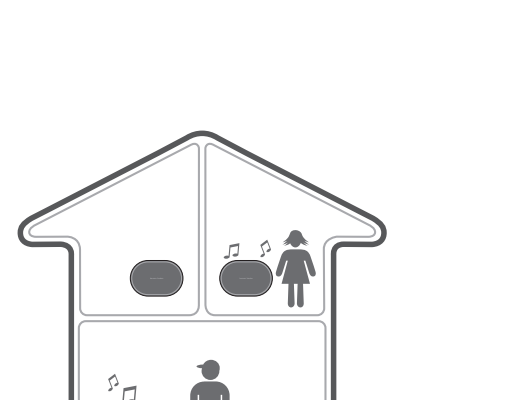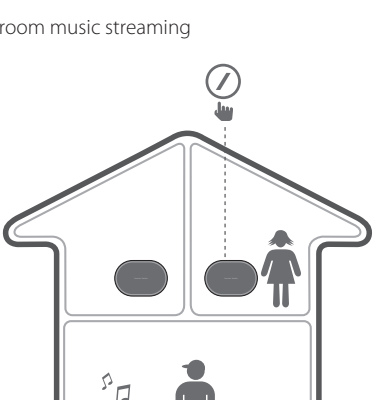

Status	LED
Wi-Fi streaming	

Party Mode

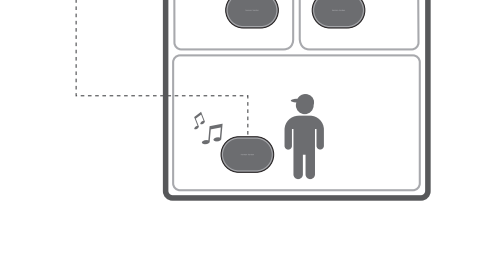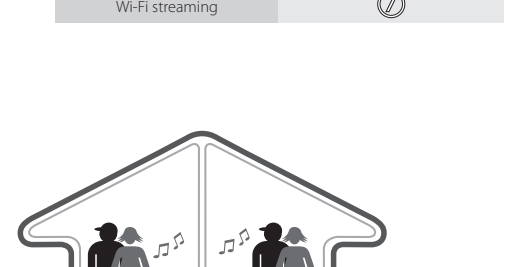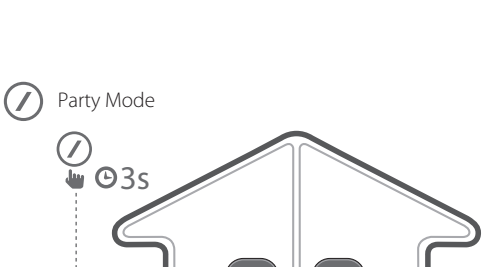

Status	LED
Party Mode	

Current Source	LED
Bluetooth®	3s → 3s →
AUX	3s → 3s →
Wi-Fi Streaming	3s → 3s →

